

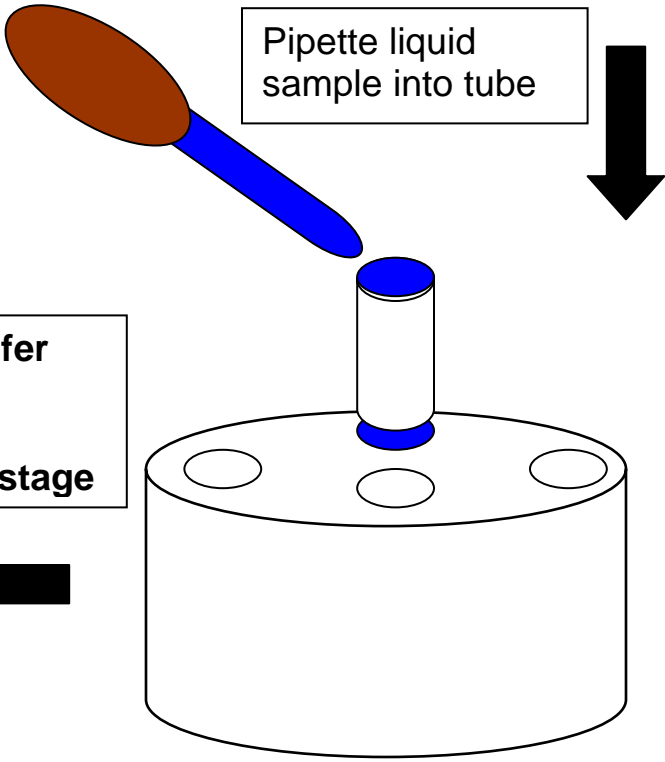


Place metal rivet or small piece of plastic tubing on top of hole (containing liquid sample). Note: Small drop of "Super Glue" can be used to hold tube to stub.

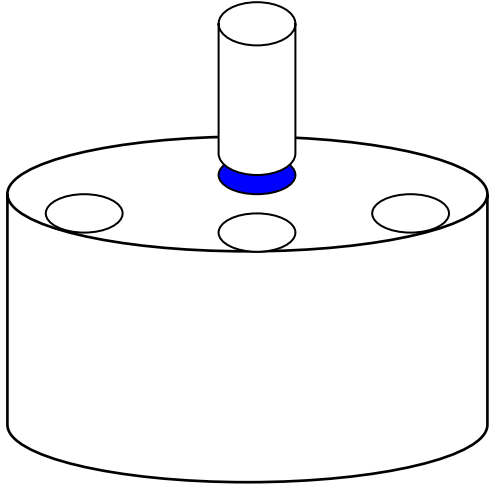

PP2000 knife

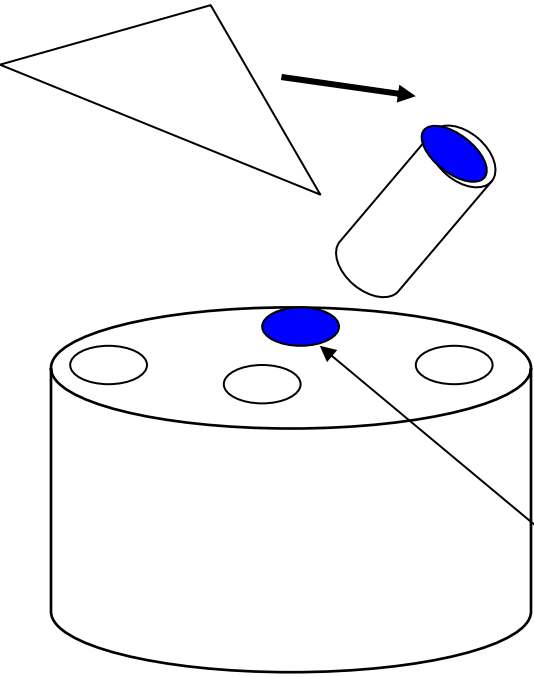

Freeze & transfer onto PP2000 preparation chamber cold stage

